


Rear Wheel

Removal

1. Park your motorcycle on its centre stand on a firm, level surface.
2. Remove the rear brake adjusting nut.
3. Disconnect the brake rod from the brake arm.
4. Disconnect the brake stopper arm from the brake panel by removing the cotter pin, stopper arm nut, washer and rubber grommet.

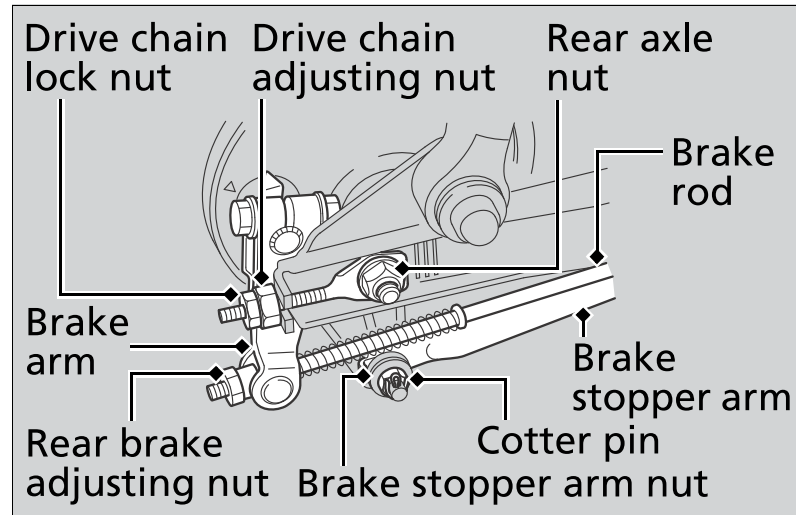

5. Loosen the drive chain lock nuts and drive chain adjusting nuts.
6. Remove the rear axle nut.
7. Remove the drive chain from the driven sprocket by pushing the rear wheel forward.
8. Remove the rear axle shaft, drive chain adjusters, rear axle washer, side collars and rear wheel from the swingarm.

