


License Plate Light Bulb

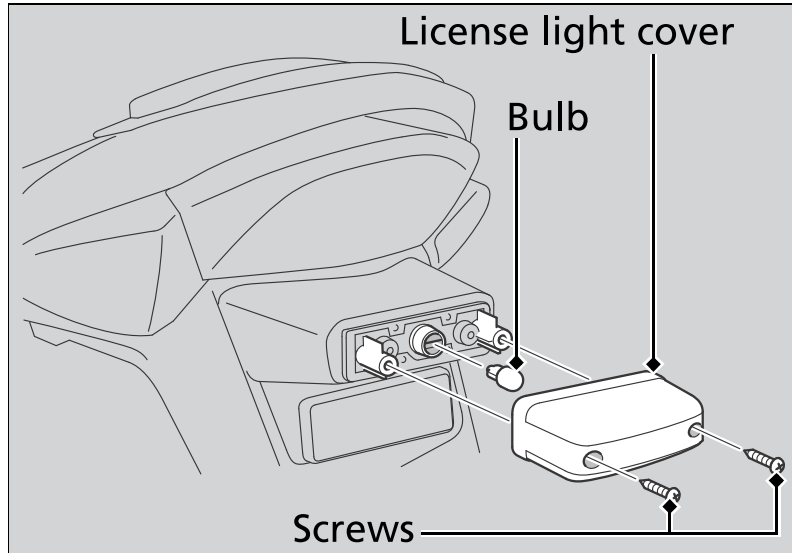

1. Remove the screws and license light cover.
2. Pull out the bulb without turning it.
3. Install a new bulb and parts in the reverse order of removal.