

Regular Service Period (Every 30 Operating Days)

- ENGINE OIL – Change.
(NOTE: Change oil every 30 operating days or every 3 months, whichever occurs first.)
- SPARK PLUG – Clean and adjust gap, or replace if necessary.
- *CONTACT POINTS AND IGNITION TIMING – Clean, check, and adjust or replace if necessary.
- *VALVE CLEARANCE – Check and adjust if necessary. COLD
- *CAM CHAIN TENSION – Adjust.
- AIR CLEANER ELEMENT – Clean and oil. Service more frequently if operated in dusty areas.
- *CARBURETOR – Check and adjust if necessary. HOT
- THROTTLE OPERATION – Inspect cable. Check and adjust free play.
- *CLUTCH – Check operation and adjust if necessary.
- DRIVE CHAIN – Check, lubricate, and adjust if necessary.
- BRAKE CONTROL LINKAGE – Check linkage and adjust if necessary.
- TIRES – Inspect and check air pressure.
- SPARK ARRESTER – Purge.
- LIGHTING EQUIPMENT – Check.
- ALL NUTS, BOLTS, AND OTHER FASTENERS – Check security and tighten if necessary.

Every Year (Or as needed)

- FUEL STRAINER – Clean.
- FUEL LINE(S) – Check.
- *STEERING HEAD BEARINGS – Adjust.
- *BRAKE SHOES – Inspect and replace if worn.