

## //////////////////////////////////// TRANSPORTING //////////////////////////////////////

1. Place the carburetor drain tube in a suitable container.
  2. Turn the fuel cap lever and fuel valve "OFF".
  3. Turn the drain screw counterclockwise to drain the gasoline from the carburetor.
- \* If wheel removal is required when transporting, follow the procedures on following pages.

### **WARNING**

*\* Never incline the machine with the front wheel up, or rest it on its side without draining the fuel. Fuel vapor or spilled fuel may ignite.*

4. After draining turn the drain screw clockwise.

### NOTE:

- \* Be sure the fuel drain is closed (screw turned clockwise) before refueling the ATC.
- \* It is unnecessary to drain the engine oil from the crankcase, as no appreciable oil leakage will occur when the ATC is rested on its side.