


## ENGINE OIL

### Engine Oil Level Check

Check engine oil level each day before operating the ATC.

The oil filler cap (1) is on the right crankcase cover and contains a dipstick for measuring the oil level. The oil level must be maintained between the upper (2) and lower (3) level marks on the dipstick.

1. Unlatch and raise the seat for better access to the oil filler cap.

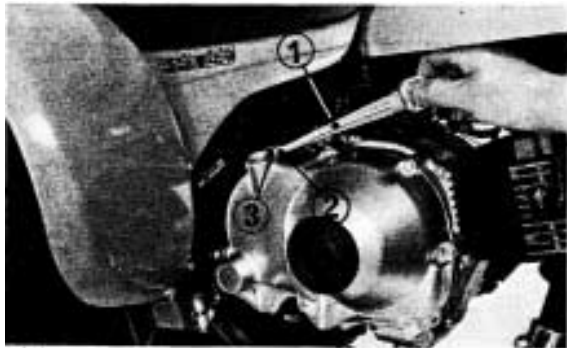

- (1) Oil filler cap/dipstick (3) Lower level mark  
(2) Upper level mark

2. With the machine on level ground, remove the oil filler cap/dipstick and wipe it clean.
3. Reinsert the dipstick without screwing it in and check the oil level.
4. Add the specified oil up to the upper level mark, if required.
5. Replace the filler cap/dipstick.

#### CAUTION:

- \* *Running the engine with insufficient oil can cause serious engine damage.*



- (4) Seat latch