


REAR WHEEL REMOVAL

1. Place a support block under the vehicle and raise the rear wheel off the ground.
2. Unlock the seat latch (1) and raise the seat.
3. Remove the cotter pin (2) which secures the axle nut (3).
4. Loosen the axle nut, with the 19 mm socket wrench. Remove the axle nut and washer (4).
5. Remove the wheel from the axle.

CAUTION:

- * *Protect exposed axle threads and splines from damage whenever the wheels are removed.*

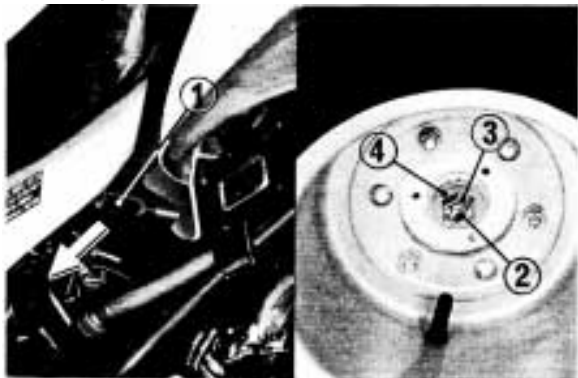

- (1) Seat latch
(2) Cotter pin


- (3) Axle nut
(4) Washer

Installation Notes:

- Reinstall the rear wheels by reversing the disassembly sequence.
- Before reinstalling the wheel, apply a small amount of grease on the axle splines (5).

CAUTION:

- * *Always replace used cotter pins with new ones.*

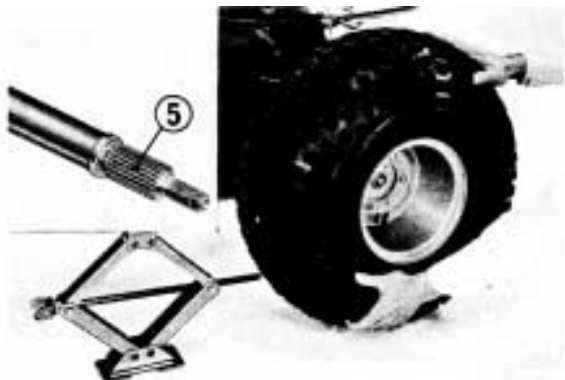

- (5) Axle spline