

## SPARK ARRESTER

The exhaust system must be periodically purged of accumulated carbon.

1. Remove the spark arrester bolts (1) and slide the arrester (2) out.

### WARNING


\* *The exhaust system becomes VERY HOT even after short periods of engine operation.*

2. Clean the arrester of accumulated carbon.
3. Start the engine and purge accumulated carbon from the system by momentarily revving up the engine several times.

### WARNING

\* *To avoid fire hazards, DO NOT perform this maintenance in the vicinity of flammable materials.*

4. Stop the engine and allow the exhaust pipe to cool.
5. Reinstall the spark arrester with the bolts.

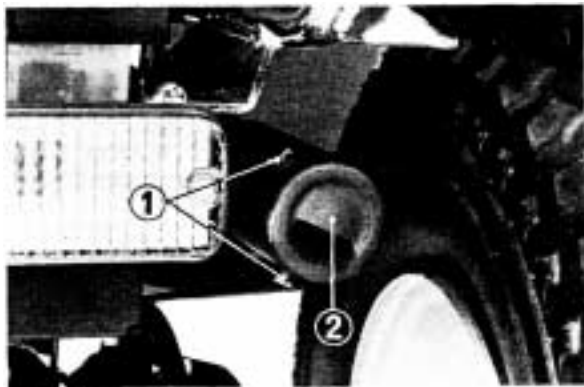

(1) Spark arrester bolts      (2) Spark arrester