

## ENGINE OIL


### Engine Oil Level Check

Check engine oil level each day before operating the ATC.

The oil filler cap/dipstick (1) is on the right crankcase cover and contains a dipstick for measuring the oil level. The oil level must be maintained between the upper (2) and lower (3) level marks on the oil filler cap/dipstick.

To check the oil level:

1. Release the seat latch by pulling the lever (4) and raise the seat for better access to the oil filler cap.

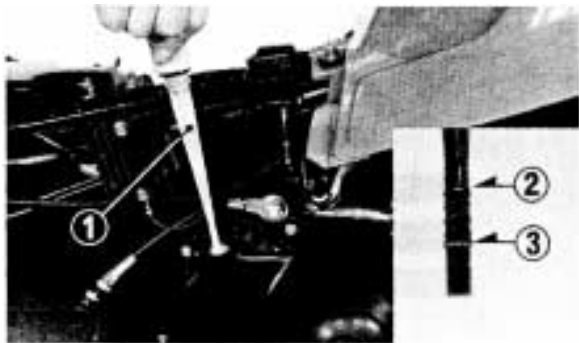

- (1) Oil filler cap/dipstick (3) Lower level mark  
(2) Upper level mark

2. With the ATC on level ground, remove the oil filler cap/dipstick and wipe it clean.
3. Reinsert the dipstick without screwing it in. Remove the oil filler cap/dipstick again and check the oil level.
4. If required add the specified oil up to the upper level mark. Do not overfill.
5. Replace the oil filler cap/dipstick.

#### CAUTION :

\* *Running the engine with insufficient oil can cause serious engine damage.*



- (4) Lever