


4. If adjustment is necessary, loosen the adjusting screw lock nut (3) and turn the adjusting screw (4) so that there is a slight resistance when the gauge (5) is inserted.
5. After adjustment, tighten the lock nut while holding the adjusting screw to prevent it from turning.
6. Recheck the clearance to make sure that it has not changed.

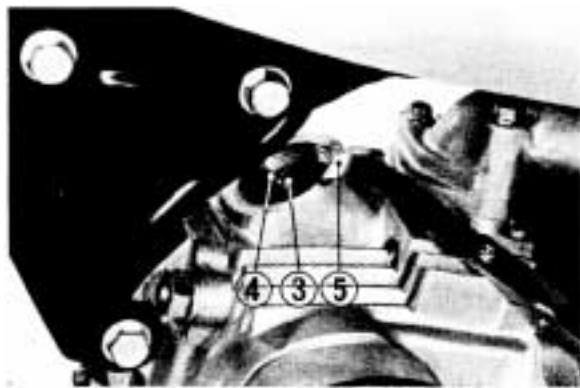

- (3) Lock nut
(4) Adjusting screw

(5) Feeler gauge