


## THROTTLE CABLE

Inspect throttle cable condition and operation. Re-route the cable if it is improperly installed. Replace the cable if it has become worn or kinked. Lubricate the cable with a commercially available cable lubricant to prevent premature wear or corrosion. Free play, measured at the tip of the throttle lever (1), should be maintained at 5–10 mm (3/16–3/8 in).

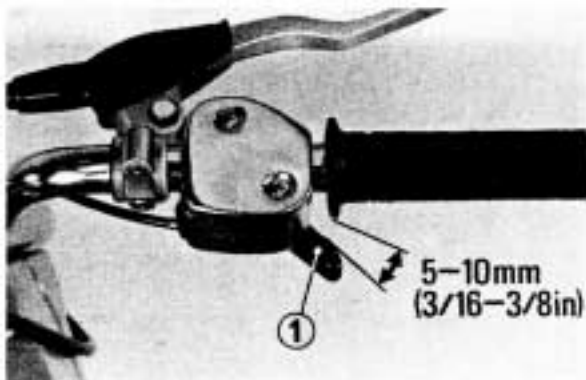


(1) Throttle lever

The cable adjuster (2) is located on top of the carburetor, against the end of the throttle cable housing. Slide the rubber sleeve up and adjust the cable. Re-install the sleeve after adjustment.

### NOTE:

\* Note the band positions when removing them.

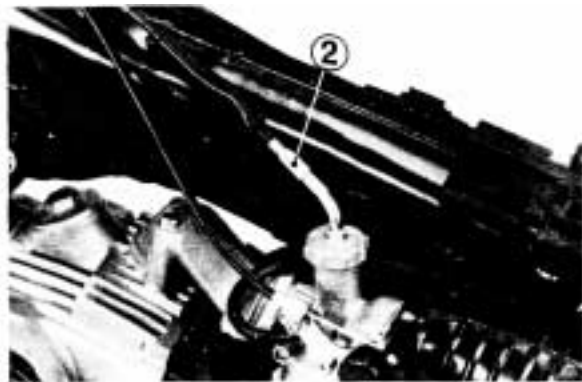

(2) Cable adjuster