

CAUTION:

- * *When the front axle is reinstalled, be careful that the grease seal is not cut or damaged.*
- * *Always replace used cotter pins with new ones. To reduce the hazard of snagging the ends of the cotter pins while the ATC is operated, we recommend that the projecting ends of the cotter pins be cut close to the axle nuts.*

 WARNING

- * *Be certain that the axle nuts are tightened and secured by cotter pins. If they are not, the wheels may come loose during operation.*
- * *If a torque wrench was not used for installation, see your authorized Honda dealer as soon as possible to verify proper assembly.*