

WARNING

- * Always turn the engine off before performing any maintenance operations, unless otherwise stated.
- * To maintain the safety and reliability of your HONDA ATC, do not modify it and use only new genuine HONDA parts or their equivalent when servicing or repairing.
The use of replacement parts which are not of equivalent quality may impair the operation of your ATC.

CAUTION:


- * Do not tilt the vehicle more than 45° when servicing the ATC Big Red. Battery electrolyte may spill out.

TOOL KIT

The tool kit (1) is stored under the seat. Remove the seat by moving the lever (2) to remove the tool kit. The tools provided are sufficient to perform routine maintenance and simple repairs. Any extensive work requiring additional tools should be performed by an authorized Honda motorcycle dealer.

Listed below are the items included in the tool kit:

- 10x12mm open end wrench
- 17x14mm open end wrench
- Spark plug + 19mm socket wrench
- Pliers ● Screwdriver blade ● Screwdriver handle
- 24mm socket wrench ● T-handle
- Tool bag

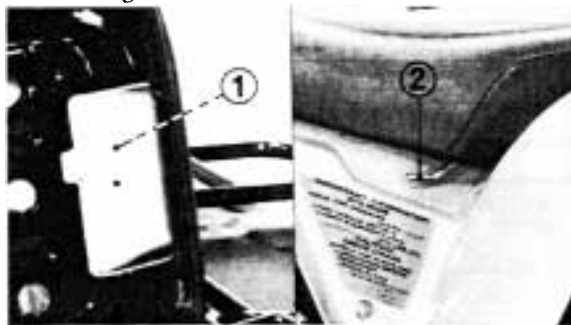

(1) Tool kit

(2) Lever