


## Front Wheel Removal


1. Place a support block under the engine to raise the front wheel off the ground.
2. Remove the front brake adjusting nut (1) and disconnect the front brake cable.
3. Remove the cotter pin (2) and remove the axle nut (3).
4. Remove the axle (4) and remove the axle collar and front wheel.

### NOTE:

- \* Cover the wheel hub as soon as the axle has been removed to prevent the entry of dirt.

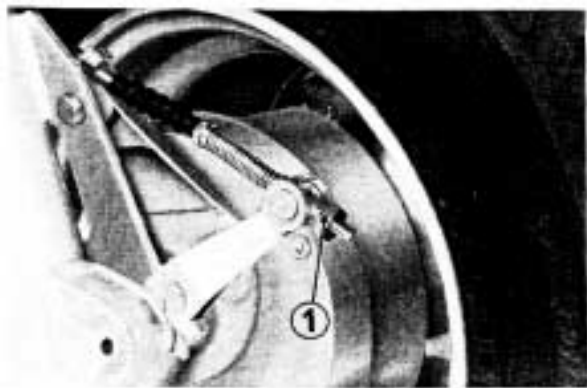

(1) Adjusting nut

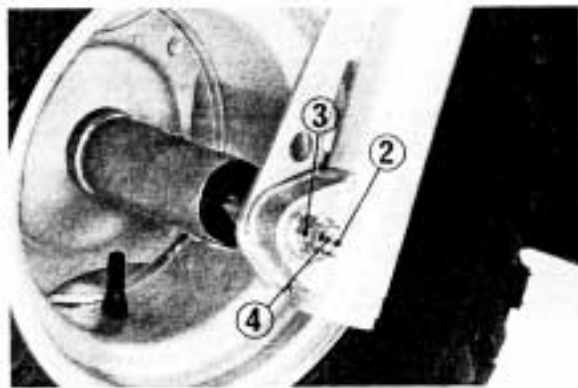

(2) Cotter pin

(3) Axle nut

(4) Axle