

- Inflate the tires to their recommended pressures. Place the ATC on blocks to raise both tires off the ground.
- Cover the ATC (don't use plastic or other coated materials) and store in an unheated area, free of dampness with a minimum of daily temperature variation. Do not store the ATC in direct sunlight.

### **Removal from Storage**

- Uncover and clean the ATC. Change the engine oil if more than 4 months have passed since the start of storage.
- Drain any excess aerosol rust-inhibiting oil from the fuel tank. Fill the fuel tank with fresh gasoline.
- Perform all Pre-ride Inspection checks (page 17). Test ride the ATC at low speeds in a safe riding area.