


ENGINE OIL/OIL FILTER SCREEN

Engine oil should be changed in accordance with the maintenance schedule. Use motor oils of the grade and viscosity recommended on page 12.

When changing oil, drain the oil from the crankcase while the engine is still warm. This will ensure complete and rapid draining.

1. Remove the oil filler cap from the right crankcase cover.
2. Place an oil drain pan under the crankcase and remove the oil drain plug (1).

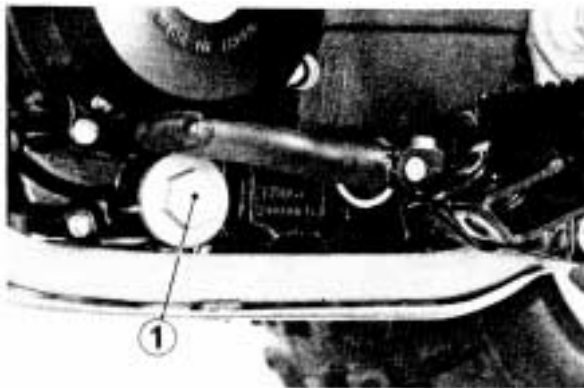


(1) Oil drain plug

NOTE:

* The oil filter screen (2) and spring (3) will come out when the drain plug is removed.

3. Clean the oil filter screen.
4. Check that oil filter screen, sealing rubber and drain plug O-ring are in good condition.
5. Operate the kick starter several times to drain any oil which may be left in the engine with the Ignition Switch is OFF.
6. Install the oil filter screen, spring and drain plug.

TORQUE: 10 – 20 N·m (1.0–2.0 kg·m, 7.14 ft·lb)

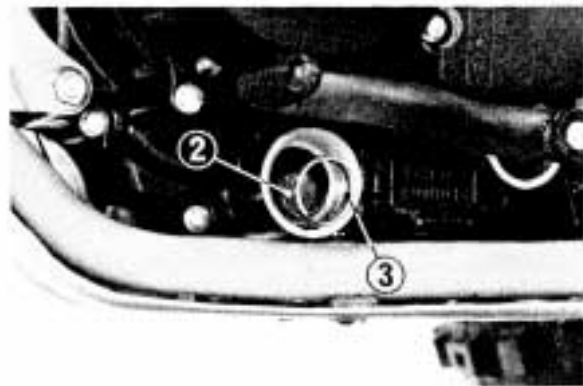

(2) Oil filter screen (3) Spring