

## TRANSPORTING

1. Turn the fuel valve OFF.
2. Remove the drain screw from the carburetor and drain the gasoline into a suitable container.

 **WARNING**

- \* *Never transport the machine on its side or with the front wheel straight up unless all fuel has been drained.*

3. Reinstall the drain screws.

**NOTE:**

- \* Be sure the drain screw is tightened.
- \* If wheel removal is required when transporting, follow the procedures on the following pages.