

## Rear Wheel Removal


1. Place a support block under the vehicle and raise the rear wheel off the ground.
2. Loosen the wheel nuts (1) with a 12 mm socket wrench.
3. Remove the wheel.

## Installation:

Reinstall the rear wheel and *tighten the wheel nuts (1) in a cross-pattern, torquing them to 30–40 N·m (3.0–4.0 kg·m, 22–29 ft·lb).*

### **⚠ WARNING**

*\* If a torque wrench was not used for installation, see your authorized Honda dealer as soon as possible to verify proper assembly.*

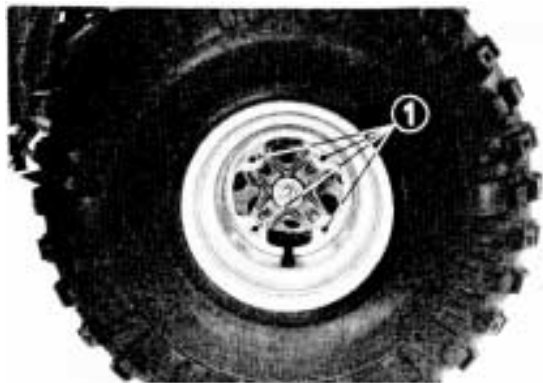

(1) Wheel nuts