

OIL FILTER ROTOR

The oil filter rotor should be cleaned in accordance with the Maintenance Schedule on page 33.


1. Remove the right footpeg (1), kickstarter pedal (2) and rear brake pedal (3).
2. Disconnect the clutch cable (4).
3. Remove the right crankcase cover (5).
4. Remove the oil filter rotor cover (6) and clean the oil filter rotor (7).
5. Make sure the rotor cover gasket is in good condition and reinstall the oil filter rotor cover.



- (1) Footpeg
(2) Kickstarter pedal

- (3) Rear brake pedal
(4) Clutch cable

6. Install the other parts in the reverse order of removal.
7. Adjust the clutch's free play.
8. Fill the crankcase with the recommended oil and check for oil leaks.

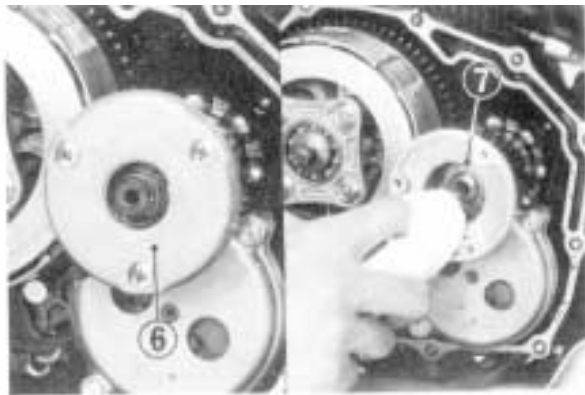

- (5) Right crankcase cover
(6) Oil filter rotor cover

- (7) Oil filter rotor