

CAM CHAIN

1. Start the engine and let it idle.
2. Remove the rubber cap (1) and loosen the tensioner adjusting bolt (2).

When it is loosened, the cam chain tensioner will automatically position itself to provide the correct cam chain tension.


3. Retighten the tensioner adjusting bolt and install the rubber cap.

NOTE:

- * Do not loosen the 6 mm bolt (3) while adjusting.



(1) Rubber cap

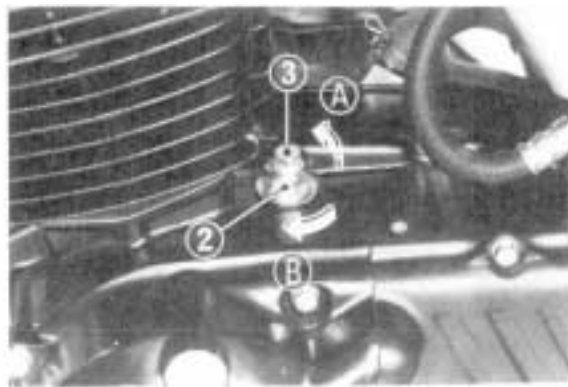

(2) Tensioner adjusting bolt (3) 6mm bolt
(A) Loosen to adjust
(B) Tighten