

## AIR CLEANER

The air cleaner element accumulates dust and must be cleaned periodically. If the ATC200 is ridden in unusually dusty areas, the element must be cleaned at more frequent intervals than specified in the MAINTENANCE SCHEDULE.

1. Remove the seat by pulling the lever (1).
2. Remove the water seal cover (2) by lifting the forward end upward.
3. Remove the three bolts (3) attaching the air cleaner case and remove the air cleaner tube clamp (4).
4. Remove the air cleaner assembly from the frame.
5. Remove the foam element from its core. Wash the element in a solution of liquid detergent and water. Rinse the filter in clean water and allow it to dry thoroughly.




(1) Lever

(2) Water seal cover

6. Soak the foam element in clean gear oil (SAE 80–SAE 90) until saturated. Squeeze out the excess gear oil.
7. Remove dust from the paper element by tapping the case lightly or by gently blowing compressed air through the filter. If the paper element is excessively dirty, replace the element or wash it in a solution of liquid detergent and water. Rinse the filter in clean water and allow it to dry thoroughly before installing.

### WARNING

- \* *Never use gasoline or low flash point solvents for cleaning the air cleaner element. A fire or explosion could result.*

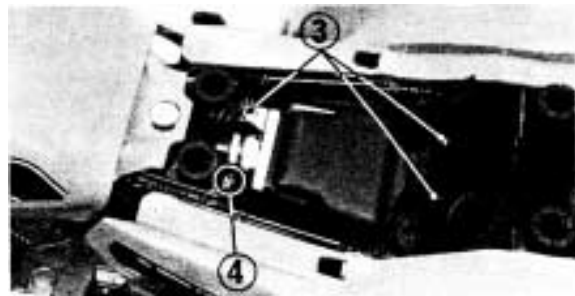

(3) Attaching bolts (4) Tube clamp