
SERIAL NUMBERS


The frame and engine serial numbers are required by your dealer when ordering replacement parts. Record the numbers here for your reference. The frame serial number (1) is stamped on the left of the steering head. The engine serial number (2) is stamped on the crankcase just above the left foot peg.

FRAME NO.

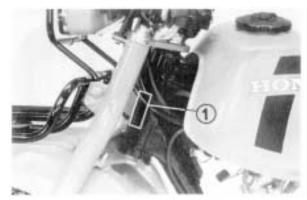

(1) Frame serial number

ENGINE NO. _____

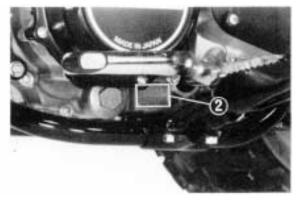

(2) Engine serial number