


Accessories may be connected to the receptacle by using the special plug (2) that came with your ATC. To attach the special plug to the accessory:

1. Install the accessory leads to the plug, making sure to connect the positive and negative leads to the corresponding plug terminals.

#### CAUTION

- \* Do not install the positive and negative accessory leads in reverse when attaching them to the special plug.

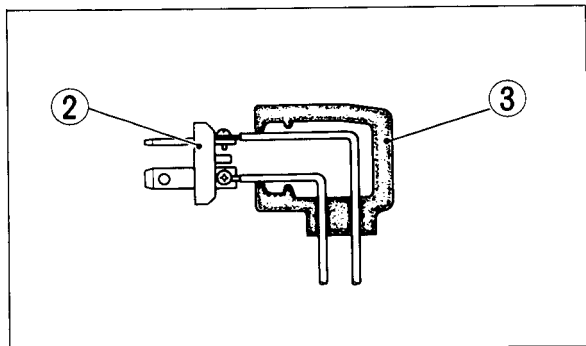

(2) Special plug

(3) Plug cover

#### NOTE:

- \* We recommend that you use AWG18–AWG20 electrical wire for attachment to the special plug.
2. With the ignition OFF, insert the plug into the plug receptacle, being careful not to twist the electrical leads coming from the accessory.

#### WARNING

- \* Make sure the ignition switch is OFF when inserting or removing the special plug.

#### CAUTION

- \* Keep the electrical leads insulated and away from hot engine parts and sharp edges.
  - \* Do not use accessories not designed for 12V DC power.
  - \* Make sure the electrical leads extend from the bottom of the plug when inserting it in the receptacle.
3. When the receptacle is not being used, cover it with the rubber cap that came with your ATC to keep out dust, water and sand.