


Starting Procedure (after Preparation)

To restart a warm engine, follow the procedure for High Air Temperature.

Normal Air Temperature

10°–35°C (50°–95°F)

1. Move the choke lever (4) all the way to “Fully Open (A)”.
2. Turn the ignition switch (5) to ON. Make sure that the transmission is in the neutral by checking the neutral indicator lamp (6).
3. Press the starter button (7) and start the engine.

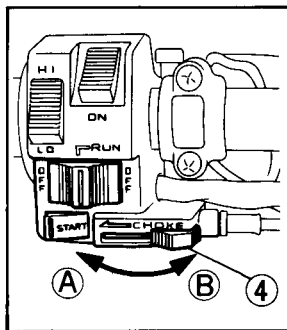

(4) Choke lever



(5) Ignition switch


NOTE:

- * Do not use the electric starter for more than 5 seconds at a time. Release the starter button for approximately 10 seconds before pressing it again.
- * The starter motor will operate only when the transmission is in neutral.

4. Immediately after the engine starts, release the starter button.
5. About a half minute after the engine starts, move the choke lever all the way to “Fully Closed (B)”.
6. If idling is unstable, open the throttle slightly.



(6) Neutral indicator lamp

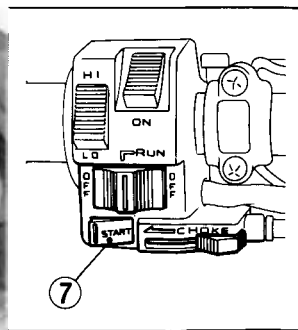

(7) Starter button