

I: Inspect and Clean, Adjust, Lubricate or Replace, if necessary C: Clean R: Replace A: Adjust		INITIAL SERVICE PERIOD (First week of operation)	REGULAR SERVICE PERIOD (Every 30 operating days)	Refer to page
*	FUEL STRAINER	C	C	45
*	THROTTLE OPERATION	I	I	57
	FINAL DRIVE OIL	I: (EVERY YEAR) R: (EVERY 2 YEARS)		58
*	BRAKE SHOES	I: (EVERY YEAR)		54
	BRAKE CONTROL LINKAGE	I	I	—
*	CLUTCH	A	A	53
*	SPARK ARRESTER		C	59
*	REVERSE LOCK MECHANISM	I	I	—
	ALL NUTS, BOLTS, FASTENERS	I	I	—
	LIGHTING EQUIPMENT	I	I	—
	TIRES	I	I	23
*	STEERING HEAD BEARING	A: (EVERY YEAR)		—