

ATC-70 resting on level ground and with the oil filler cap touching the filler hole but not screwed in.

Oil level should be maintained between the upper and lower oil level marks on the dipstick.


ENGINE OIL CHANGE

Engine oil should be changed in accordance with the maintenance schedule on pages 21 and 22. Use motor oils of the grade and viscosity recommended on page 12.

When changing oil, drain the used oil from the crankcase while the engine is still warm. This will ensure complete and rapid draining.

1. Remove the oil filler cap from the right crankcase cover.

2. Place a drip pan under the engine to catch the oil, and then remove the drain plug ① with a 17mm box wrench.

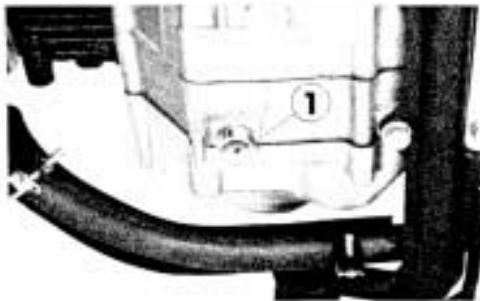

① Drain plug

3. After the oil stops draining from the crankcase, operate the recoil starter rope several times to drain any oil which may be left in the engine.