


index mark. Check the clearance of both valves by inserting the 0.05mm (0.002 in.) gauge into between the adjusting screw and valve stem.

To adjust, loosen the adjusting screw lock nut ③ (page 28) and turn the adjusting screw ④ so that a slight resistance is felt when the gauge is inserted. After completing the adjustment, tighten the adjusting screw lock nut while holding the adjusting screw to prevent it from turning. Recheck the clearance to make sure that the adjustment has not been disturbed.

CONTACT BREAKER POINT GAP AND IGNITION TIMING ADJUSTMENT

Ignition timing is adjusted by altering the contact breaker point gap ①.

1. Remove the recoil starter located on the left side of the engine.
2. Rotate the flywheel counterclockwise

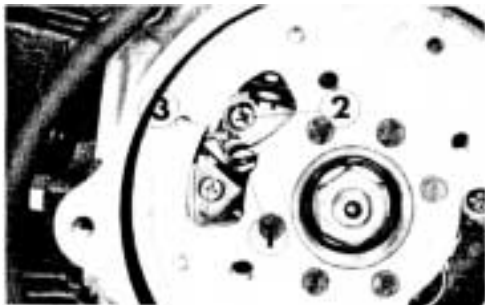

- ① Contact breaker point
- ② Contact breaker point locking screw
- ③ Contact breaker point base