

THROTTLE CABLE INSPECTION AND ADJUSTMENT

Inspect the condition and operation of the throttle cable. The throttle cable must not bind or impair smooth operation of the throttle lever in any steering position. Reroute the cable if it is improperly installed. Replace the cable

if it has become worn or kinked.

Free play, measured at the tip of the throttle lever, should be maintained at 5mm (0.2 in.).

The adjusting nut is located the top of the carburetor, against the end of the throttle cable sheath. Slide back the rubber sleeve ① to expose the throttle cable adjuster ②. Replace the sleeve after adjustment.



- ① Rubber sleeve
- ② Throttle cable adjuster