


FUEL FILTER MAINTENANCE

The fuel filter is located on the right side of the carburetor body. The fine mesh screen of the filter prevents dirt from entering the carburetor passages. Dirt which accumulates at the filter must be removed periodically, or the flow of fuel will eventually be restricted.

1. Turn the fuel valve to the "S" position.
2. Remove the two screws attaching the fuel filter cover, ① and remove the cover.
3. Remove the neoprene "O" ring ② and the filter screen ③.
4. Wash the filter screen in solvent.
5. Reassemble by reversing the disassembly procedures.
6. Turn the fuel valve to the "ON" position, and check for leaks at the fuel filter cover.

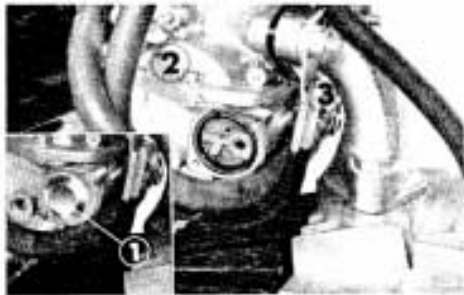

- ① Filter cover ② "O" ring
③ Filter screen