


# OPERATING INSTRUCTIONS

## IGNITION/ENGINE STOP SWITCH


The ignition/engine stop switch ① is on the right handlebar. Turn the switch to "ON" when starting the engine and to "OFF" to stop the engine.

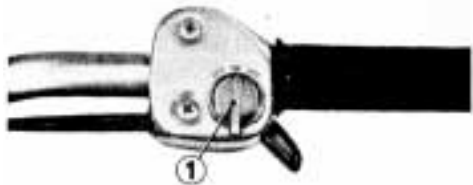

① Ignition/Engine stop switch

## BRAKE LEVER

The brake lever ① is on the left handlebar and applies the brake to the rear wheels only. The brake lever free play should be 15 ~ 20 mm (5/8 ~ 3/4 in.) at the tip of the lever.

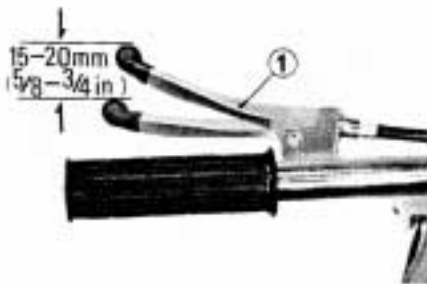

① Brake lever