


GEAR CHANGE PEDAL

The gear change pedal ① is near the left foot peg. One full stroke of the gear change pedal will shift the transmission into gear. The pedal automatically returns to the horizontal position when released. The next stroke of the pedal engages the next gear in sequence. The shifting sequence is illustrated in the diagram on the opposite page.

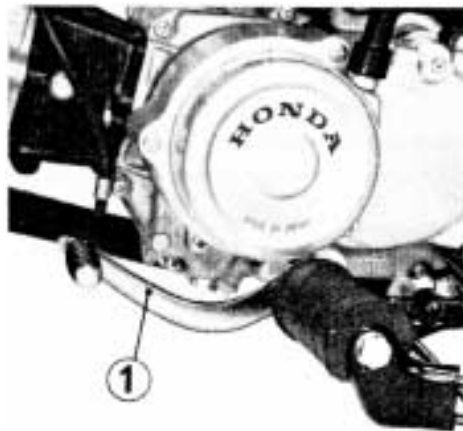

① Gear change pedal

The pedal is depressed to upshift and is raised to downshift.

With the transmission in neutral, depress the pedal to shift into low gear. 2nd and 3rd (top) gear are selected in sequence each time the pedal is again depressed.

Each time the pedal is raised, the next lower gear in sequence is engaged until the neutral position is reached.