

## FUEL TANK

The fuel tank cap is removed by turning it counterclockwise. The fuel tank capacity including reserve is 4.3 liters (1.1 gal). Use of low-lead gasoline with 91 research octane number or higher is recommended. If such gasoline is not available, you may use a leaded regular grade gasoline. When refueling, do not allow dirt, water, or other contaminants to enter the fuel tank.

### **WARNING**


Gasoline is extremely flammable and explosive under certain conditions. Always stop the engine and do not smoke or allow flames or sparks near the ATC-70 when draining fuel or refueling.

**Do not overfill the tank (there should be no fuel in the filler neck). Make sure that the filler cap is closed securely.**

**Avoid repeated or prolonged contact with skin or breathing of vapor. KEEP OUT OF REACH OF CHILDREN.**

## FUEL VENT VALVE

The fuel vent valve ② is on the fuel tank cap. Turn the valve "ON" to allow fuel to flow when running the engine. Turning the valve "OFF" will prevent fuel from flowing out the vent hole when transporting the motorcycle.

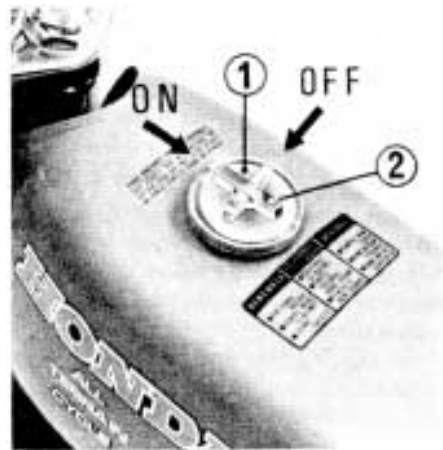

① Fuel tank cap ② Fuel vent valve