

---

## STORAGE

Preparing the machine for storage:

1. Completely clean all parts of the machine. If the machine has been exposed to sea breeze or salt water, wash it down with fresh water and wipe dry.
2. Drain the gasoline from the fuel tank and the carburetor.
3. Change the engine oil.
4. Position the piston to the top of the compression stroke. This can be determined by pulling the starter rope until compression is felt.
5. Cover the machine with a dust cover.
6. Store in a place which is free of humidity and dust.
7. Inflate the tires to the normal pressure and place the ATC on suitable blocks to raise the tires off the ground.

