


VALVE CLEARANCE ADJUSTMENT

Valve clearance should be maintained at 0.05 mm (0.002 in.). Excessive clearance will cause noise. Insufficient clearance will cause loss of power and could cause valve damage.

Valve clearance must be checked with the engine cold.

NOTE

Check or adjust valve clearance while the engine is cold. The clearance may increase as the temperature rises.

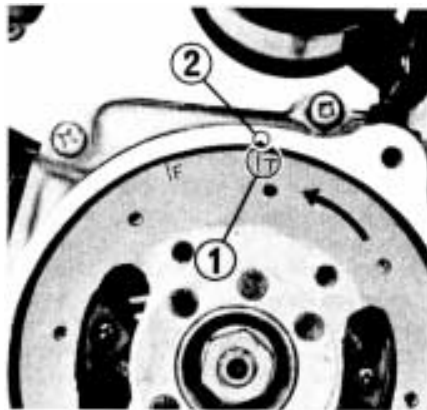

- ① "T" mark
- ② Index mark



- ③ Adjusting screw lock nut
- ④ Adjusting screw
- ⑤ Feeler gauge