


CLUTCH ADJUSTMENT

1. Make sure the ignition/engine stop switch is off.
2. Loosen the lock nut ② , and turn the clutch adjuster ① counterclockwise until you feel resistance. Then turn 1/8 to 1/4 turn clockwise, and tighten the lock nut to hold the adjuster in this position.
3. After adjustment, start the engine and test ride the **ATC 70** to be certain that the clutch is operating properly.

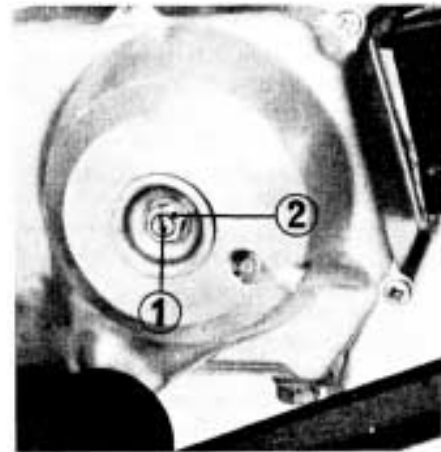

① Clutch adjuster ② Lock nut