

## TRANSPORTING THE ATC (Continued)

### REMOVING THE REAR WHEELS

Remove the cotter pin ① which secures the axle nut ② .

Loosen the axle nut, using the socket wrench.  
Remove the axle nut and washer ③ .

Remove the wheel from the axle.

#### CAUTION

*Protect exposed axle threads and splines from damage whenever the wheels are removed.*

