


INSTALLING THE REAR WHEELS

Reinstall the rear wheels by reversing the disassembly sequence.

Before wheel installation, apply a small amount of grease on the axle spline.

Replace used axle nut cotter pins with new ones.

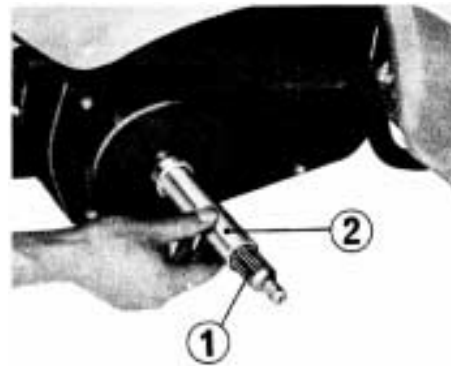

① Spline ② Wheel spacer