

TRANSPORTING THE ATC (Continued)


REMOVING THE FRONT WHEEL

If limited carrying space requires removal of the front wheel, use the following procedure:

1. Remove the cotter pin ① securing the front axle nut.
2. Remove the axle nut ② and washer ③
3. Pull out the axle ④ and then remove the front wheel.

NOTE

Cover the wheel hub as soon as the axle has been removed to prevent entry of dirt.

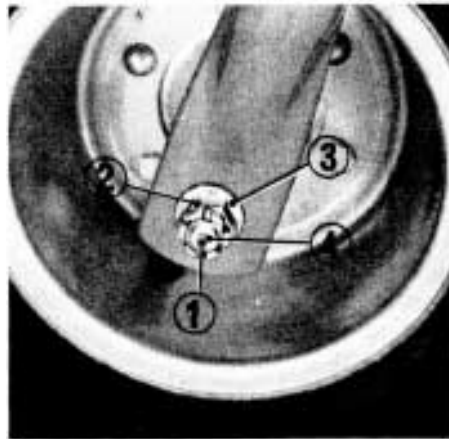

① Cotter pin

② Axle nut

③ Washer

④ Front axle