

OPERATING INSTRUCTIONS

IGNITION SWITCH


The ignition switch ① is on the right handlebar. Turn the switch to **ON** when starting the engine and to **OFF** to stop the engine.



① Ignition switch

BRAKE LEVER

The brake lever ① is on the left handlebar and applies the brake to the rear wheels only. The brake lever free play should be 15 ~ 20 mm (5/8 ~ 3/4 in) at the tip of the lever.

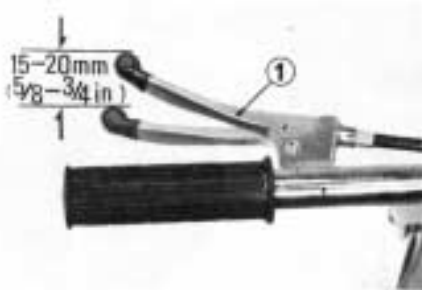

① Brake lever

GEAR CHANGE PEDAL

The gear change pedal ① is near the left foot peg. One full stroke of the gear change pedal will shift the transmission into gear. The pedal automatically returns to the horizontal position when released. The next stroke of the pedal engages the next gear in sequence. The shifting sequence is illustrated in the diagram on the next page.