


### **WARNING**

- \* Always turn the engine off before performing any maintenance operations unless otherwise stated.
  - \* To maintain the safety and reliability of your HONDA ATC do not modify it and use only new genuine HONDA parts or their equivalent when servicing or repairing.
- The use of replacement parts which are not of equivalent quality may impair the operation of your ATC.

### **TOOL KIT**

A spark plug wrench and handle are attached under the rear of the seat. Any extensive work requiring additional tools should be performed by an authorized Honda dealer.

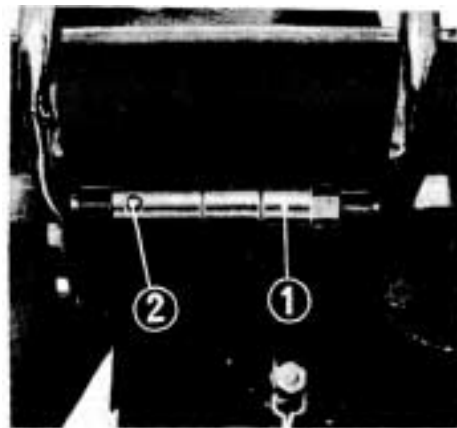

- ① Spark plug wrench
- ② Wrench handle