


## DRIVE CHAIN ADJUSTMENT


The drive chain ② will wear with use and requires periodic adjustment. Adjustment is normally performed in accordance with the MAINTENANCE SCHEDULE.

Shut the engine off. Remove the inspection hole ① cap from the side of the chain guard. Chain slack should be checked by measuring the amount of chain slack through the inspection hole. The amount of slack should be 10 mm ~ 20 mm (3/8 ~ 3/4 in ).

To adjust slack, raise the right side of the ATC and place a block under the right tire. Loosen the lock nuts ③ and move the chain tensioner plate ④ to obtain correct chain slack. Tighten the lock nuts. Install the inspection hole cap.

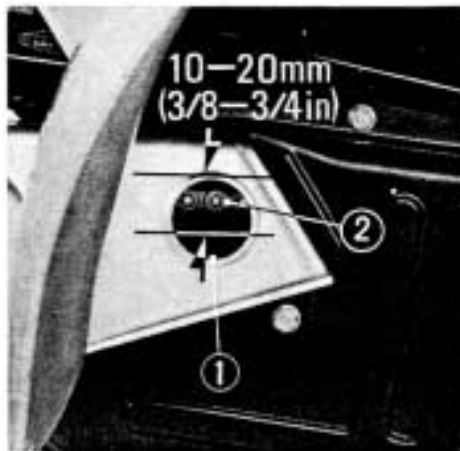

① Inspection hole ② Drive chain

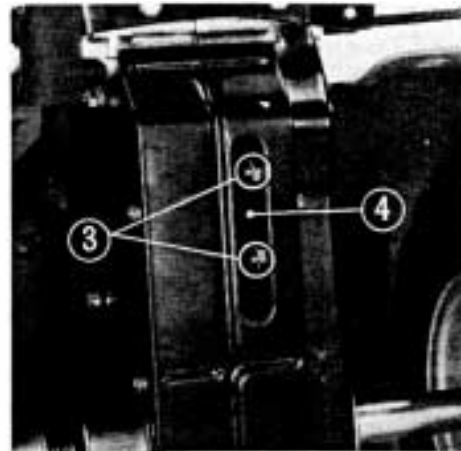

③ Lock nuts ④ Chain tensioner plate