

Contact Breaker Point Adjustment	33	Riding Through Water	45
Ignition Timing	34	Tire Care	55
Spark Plug Replacement+Adjustment.....	35	Transporting the ATC.....	56
Air Cleaner Maintenance.....	36	Fuel	56
Throttle Cable Inspection+Adjustment	38	Removing The Rear Wheels	59
Carburetor Adjustment	39	Installing The Rear Wheels	60
Fuel Strainer Maintenance	40	Removing The Front Wheel	61
Clutch Adjustment	41	Installing The Front Wheel	62
Cam Chain Adjustment	42	OPTIONAL PARTS	63
Spark Arrestor Maintenance	43	SPECIFICATIONS	66
RIDING THE HONDA ATC	44	WIRING DIAGRAM	68
Safety Precautions	45		
Turning Maneuvers	46-47		
Skidding.....	48-49		
Climbing Hills	50-51		
Descending Hills	52		
Traversing Slopes.....	53		