


## SERIAL NUMBER LOCATION

The frame serial number ① is stamped on the left of the steering head pipe. The engine serial number ② is located on the crankcase directly above the step bar attaching point.

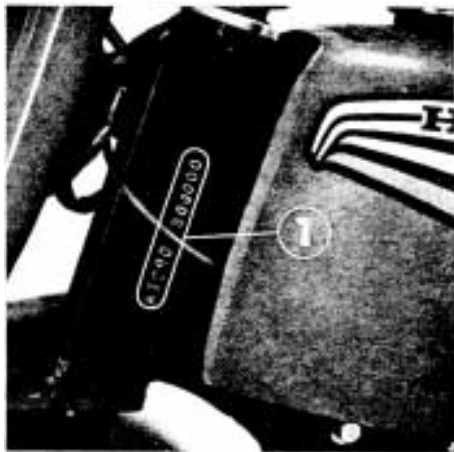

① Frame serial number



② Engine serial number