



## STARTING THE ENGINE

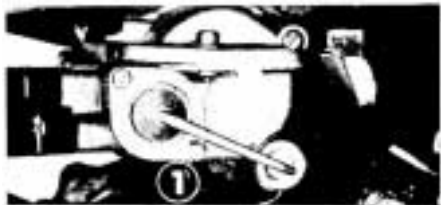

② Main/headlight switch

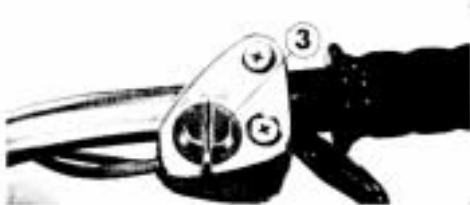

④ Neutral indicator

1. Turn the fuel valve lever ① to "ON" position.
2. Turn the main/headlight switch ② to "I" position.
3. Turn the emergency switch ③ to "ON" position.
4. Shift the gear change pedal into neutral. See that the neutral indicator ④ points to "N".
5. Close the choke lever and open the throttle lever approximately 1/4 to 1/3.
6. Pull the recoil starter ⑤ lightly