


STORAGE

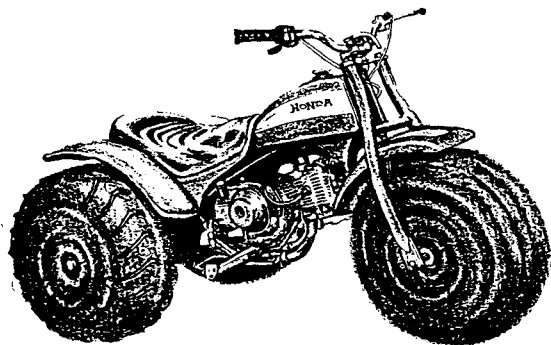

Preparing the machine for storage

- ① Completely clean all parts of the machine. When exposed to sea breeze or salt water, wash the machine down with fresh water and wipe dry.
- ② Drain gasoline from the fuel tank and carburetor.
- ③ Change the engine oil.
- ④ Position the piston to the top of the compression stroke. This can be determined by pulling the starter rope until compression is felt.
- ⑤ Enclose the machine with a dust cover.
- ⑥ Store in a place which is free of humidity and dust.