

High Air Temperature 35°C (95°F) or above

1. Do not use the choke.
2. Start the engine following step under "Normal Air Temperature."

Low Air Temperature 10°C (50°F) or below

1. Follow steps 1 - 2 under "Normal Air Temperature."
2. Warm up the engine by opening and closing the throttle slightly,
3. Continue warming up the engine until it runs smoothly and responds to the throttle when the choke lever (1) is at Fully OFF (B).

Flooded Engine

If the engine fails to start after several repeated attempts, it may have become flooded with excess fuel. To clear the engine, turn off the ignition switch and move the choke lever to Fully OFF (B). Open the throttle fully and crank the engine several times with the kickstarter. Turn the ignition switch to ON and open the throttle slightly; start the engine using the kickstarter.