

Item	Operation	Frequency				Ref. to page
		1.000 km (625 miles)	3.000 km (1.875 miles)	6.000 km (3.750 miles)	Every ... km (miles)	
Front brake cable	Inspect, adjust and lubricate	■	■	■	3.000 (1.875)	12
Rear brake	Inspect and adjust	■	■	■	3.000 (1.875)	13
Brake shoes	Inspect for wear	■	■	■	3.000 (1.875)	—
Brake light switch	Adjust	■	■	■	3.000 (1.875)	78
Tyre	Inspect and adjust the pressure	■	■	■	1.000 (625)	19
Wheels/spokes	Inspect and adjust	■	■	■	3000 (1.875)	—
Drive chain	Inspect, adjust and lubricate	■	■	■	1.000 (625)	61
Suspension	Inspect			■	6.000 (3.750)	67
Front fork oil	Replace				9.000 (5.625)	—
Battery (electrolyte level)	inspect and add	■	■	■	1.000 (625)	72
Switches/instruments	Inspect their operation	■	■	■	3.000 (1.875)	21
Lighting/signal system	Inspect their operation	■	■	■	3.000 (1.875)	—
Steering head bearing	Inspect, adjust and lubricate	■		■	6.000 (3.750)	—
Nuts, bolts and fasteners	Inspect and retighten	■	■	■	3.000 (1.875)	—

Note: 1. Engine oil: check level everyday and refill if necessary.

2. Under very dusty or moist conditions, replace the air cleaner more frequently.

For your safety, we recommend that these services be performed only by Honda dealers.