

Installation Notes


- Reverse the removal procedure.
- Insert the axle through the wheel hub and right fork leg.
Make sure that the tang (5) on the right fork leg is located in the brake panel.
- Tighten the axle nut to the specified torque.

Axle nut torque: 44 N·m (4.5 kgf·m, 33 lbf·ft)

- Adjust the brake (page 11-13)
- After installing the wheel, apply the brake several times and check for wheel rotation when released.



If a torque wrench was not used for installation, see your Honda dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.

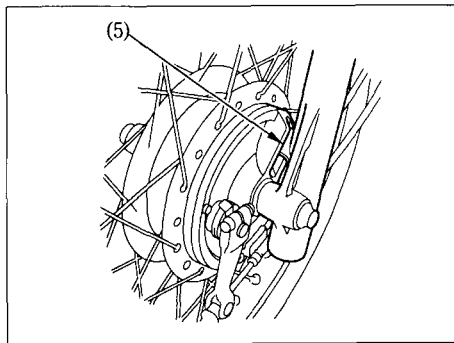

(5) Tang