

(Ref. No.) Description	Function
(1) Speedometer	Shows riding speed.
(2) Gear range indicator	Show proper speed range for each gear.
(3) Odometer	Shows accumulated mileage.
(4) Tripmeter	Shows mileage per trip.
(5) Side stand indicator (amber)	Light when the side stand is put down. Before parking, check that the side stand is fully down; the light only indicates the side stand ignition cut-off system (page 34) is activated.