

<b>(Ref.No.) Description</b>	<b>Function</b>
(8) Side stand indicator	Lights when the side stand is put down. Before parking, check that the side stand is fully down; the light only indicates the side stand ignition cut-off system (page 40) is activated.
(9) Coolant temperature gauge	Shows coolant temperature (see page 13).
(10) Neutral indicator (green)	Lights when the transmission is in neutral.
(11) Low oil pressure indicator	Lights when the engine oil pressure is below the normal operating range. Should light when ignition switch is ON and engine is not running. Should go out when the engine starts, except for occasional flickering at or near idling speed when engine is warm. <b>CAUTION:</b> * <b>Running the engine with insufficient oil pressure may cause serious engine damage.</b>
(12) Tripmeter reset knob	Resets tripmeter to zero (0). Turn knob in direction shown.