


6. With the handlebar in straight ahead position, raise the front end of the fuel tank and support it with the fuel tank support rod (3).


CAUTION:

- * Do not raise the fuel tank more than necessary.

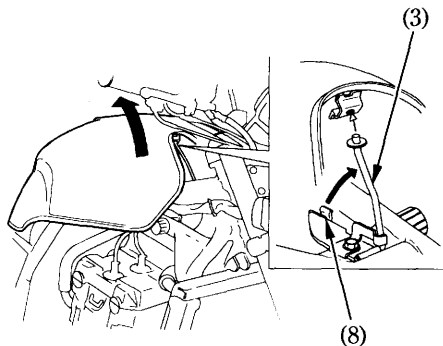

- (3) Fuel tank support rod
(8) Rod holder

7. Disconnect the spark plug caps (4) from the spark plugs.
8. Clean any dirt from around the spark plug bases.
Remove the spark plugs using the spark plug wrench (5) furnished in the tool kit.

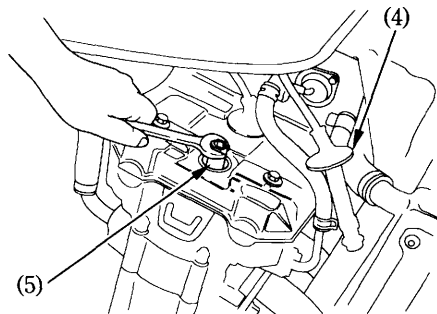

- (4) Spark plug cap
(5) Spark plug wrench